



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- ▣ Replace engine oil
- ▣ Replace engine oil filter

CHASSIS AND BODY MAINTENANCE

- ▣ Inspect brake and automatic transaxle fluids
- ▣ Inspect brake, clutch and exhaust systems
- ▣ Inspect transfer gear oil
- ▣ Inspect differential gear oil
- ▣ Inspect brake pads, rotors and other brake components
- ▣ Inspect foot brake and parking brake



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Adjust intake and exhaust valve clearances (Severe conditions only)
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system
- ⚙️ Replace engine oil filter

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake, clutch and automatic transaxle fluids
- ⚙️ Replace brake fluid (Severe conditions only)
- ⚙️ Inspect power steering fluid and lines
- ⚙️ Inspect brake, clutch and exhaust systems
- ⚙️ Inspect manual transaxle gear oil
- ⚙️ Inspect transfer gear oil
- ⚙️ Inspect differential gear oil >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚙️ Inspect steering gear and linkage, axle & suspension parts & front driveshafts
- ⚙️ Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Inspect brake linings, drums and other brake components
- ⚙️ Lubricate locks, hinges & hood latch
- ⚙️ Inspect seat belts, buckles, retractors, anchors & adjuster
- ⚙️ Inspect foot brake, parking brake and clutch



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- ▣ Replace engine oil
- ▣ Replace engine oil filter

CHASSIS AND BODY MAINTENANCE

- ▣ Inspect brake, clutch and automatic transaxle fluids
- ▣ Inspect brake, clutch and exhaust systems
- ▣ Inspect transfer gear oil
- ▣ Inspect differential gear oil
- ▣ Inspect brake pads, rotors and other brake components
- ▣ Inspect foot brake and parking brake and clutch



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- Inspect and adjust drive belts
- Adjust intake and exhaust valve clearances (Severe conditions only)
- Replace engine oil
- Replace engine oil filter
- Check and correct engine coolant mixture ratio
- Inspect cooling system
- Inspect fuel lines
- Replace spark plugs
- Inspect EVAP vapour lines
- Inspect heated oxygen sensor

CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and automatic transaxle fluids
- Replace brake fluid
- Inspect brake booster vacuum hoses, connections & check valve >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems
- Inspect manual transaxle gear oil
- Replace automatic transaxle fluid (Severe conditions only)
- Inspect transfer gear oil
- Replace differential gear oil
- Inspect steering gear and linkage, axle & suspension parts & driveshafts
- Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Lubricate locks, hinges & hood latch
- Inspect seat belts, buckles, retractors, anchors & adjuster
- Inspect foot brake and parking brake



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Replace air cleaner filter
- ⚙️ Fuel filter (In-tank type)
(Severe conditions only)

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake, clutch and automatic transaxle fluids
- ⚙️ Inspect brake, clutch and exhaust systems
- ⚙️ Inspect transfer gear oil
- ⚙️ Inspect differential gear oil
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Inspect foot brake and parking brake and clutch



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Adjust intake and exhaust valve clearances (Severe conditions only)
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake, clutch and automatic transaxle fluids
- ⚙️ Replace brake fluid (Severe conditions only)
- ⚙️ Inspect power steering fluid and lines
- ⚙️ Inspect brake, clutch and exhaust systems
- ⚙️ Inspect manual transaxle gear oil
- ⚙️ Inspect transfer gear oil
- ⚙️ Inspect differential gear oil
- ⚙️ Inspect steering gear and linkage, axle & suspension parts & driveshafts >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚙️ Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Inspect brake linings, drums and other brake components
- ⚙️ Lubricate locks, hinges & hood latch
- ⚙️ Inspect seat belts, buckles, retractors, anchors & adjuster
- ⚙️ Inspect foot brake and parking brake



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- ▣ Replace engine oil
- ▣ Replace engine oil filter

CHASSIS AND BODY MAINTENANCE

- ▣ Inspect brake, clutch and automatic transaxle fluids
- ▣ Inspect brake, clutch and exhaust systems
- ▣ Inspect transfer gear oil
- ▣ Inspect differential gear oil
- ▣ Inspect brake pads, rotors and other brake components
- ▣ Inspect foot brake and parking brake



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- Inspect and adjust drive belts
- Adjust intake and exhaust valve clearances (Severe conditions only)
- Replace engine oil
- Replace engine oil filter
- Replace engine coolant (Nissan Genuine Coolant)
- Inspect cooling system
- Inspect fuel lines
- Replace spark plugs
- Inspect EVAP vapour lines
- Inspect heated oxygen sensor

CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and automatic transaxle fluids
- Replace brake fluid
- Inspect brake booster vacuum hoses, connections & check valve >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems
- Inspect manual transaxle gear oil
- Replace automatic transaxle fluid (Severe conditions only)
- Inspect transfer gear oil
- Replace differential gear oil
- Inspect steering gear and linkage, axle & suspension parts & driveshafts
- Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Lubricate locks, hinges & hood latch
- Inspect seat belts, buckles, retractors, anchors & adjuster
- Inspect foot brake and parking brake



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- ⌘ Replace engine oil
- ⌘ Replace engine oil filter

CHASSIS AND BODY MAINTENANCE

- ⌘ Inspect brake, clutch and automatic transaxle fluids
- ⌘ Inspect brake, clutch and exhaust systems
- ⌘ Inspect transfer gear oil
- ⌘ Inspect differential gear oil
- ⌘ Inspect brake pads, rotors and other brake components
- ⌘ Inspect foot brake and parking brake



NISSAN X-TRAIL



ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Adjust intake and exhaust valve clearances (Severe conditions only)
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system
- ⚙️ Fuel filter (in-tank type) (Severe conditions only)
- ⚙️ Replace air cleaner filter

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake, clutch and automatic transaxle fluids
- ⚙️ Replace brake fluid (Severe conditions only)
- ⚙️ Inspect power steering fluid and lines
- ⚙️ Inspect brake, clutch and exhaust systems
- ⚙️ Inspect manual transaxle gear oil
- ⚙️ Inspect transfer gear oil >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚙️ Inspect differential gear oil
- ⚙️ Inspect steering gear and linkage, axle & suspension parts & driveshafts
- ⚙️ Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Inspect brake linings, drums and other brake components
- ⚙️ Lubricate locks, hinges & hood latch
- ⚙️ Inspect seat belts, buckles, retractors, anchors & adjuster
- ⚙️ Inspect foot brake, parking brake and clutch